



IMPORTANT INVERT LEVEL NOTE (RIBBED TANKS ONLY):
 The inlet and outlet Invert Level(IL) shown on this drawing is to internals of the shell unless otherwise stated.
 For Invert level to the outside of the shell ribs, see the conversion below:

Ø1.5m,1.8m,2.5m	IL+50mm ('X')
Ø3.0m,4.0m	IL+75mm ('X')

INNER TANK SHELL
DETAIL 'Y'

TANKS SUPPLIED WITH LOOSE SHAFTS DO NOT COME SUPPLIED WITH A FIXING KIT. THIS IS THE RESPONSIBILITY OF THE SITE CONTRACTOR. **Stock Code:RW08-F200**

1	21/11/11	DG	RP	RP	ISSUED FOR MANUFACTURE
REV	DATE	BY	CHKD	APPD	DESCRIPTION
		DO NOT SCALE IF IN DOUBT ASK ALL DIMENSIONS IN MM		TOLERANCES (unless noted otherwise) GENERAL LINEAR DIMS : +/- 5mm ANGULAR DIMENSIONS : +/- 1/2~	
THIS DRAWING IS THE PROPERTY OF CONDER AQUA SOLUTIONS LTD AND IS NOT TO BE COPIED IN PART OR WHOLE WITHOUT WRITTEN PERMISSION					

Designed by DG 21/11/2011	Checked by RP 21/11/2011	Approved by RP 21/11/2011
 CONDER AQUA SOLUTIONS <small>A PREMIER TECH AND EPS JOINT COMPANY</small>		RAINWATER 8,000L CLASS 2 SHELL RW08-F200